

Programming your ADB Remote Control

- Turn on your television.
- Press and release the TV button.
- Press and hold the RCU SETUP button until the TV button blinks twice.
- Enter 9 9 1.
- Aim the remote at the TV. Press and release the POWER button.
- Press and release the CH + slowly until the TV turns off.
- Press POWER button to turn the TV back on.
- Press the RCU SETUP button to store the code for the TV. The TV button will blink twice.
- Press and release the STB button.
- Press and hold the RCU SETUP button until the STB button blinks.
- Enter 9 9 5.
- Press and release the POWER button.
- Press and release the TV button.
- Press and release the POWER button.
- Press and release the STB button.
- Press and hold the RCU SETUP button until the STB button blinks twice.



Programming Your Entone Remote Control

- Turn on your television.
 - Press the TV button and hold it for 5 seconds. The DEVICE MODE button will light up.
 - Press the POWER button.
 - Aim the remote at the TV and press either the CH UP or CH DN button to start auto-scan. The TV/AUX button will blink every 5 seconds while in scan mode.
 - When the TV turns off, the code has been found. Press OK to lock the code.
- ***If all code sets are exhausted in the search and the OK button is not Pressed, the TV button will blink 7 times and the search mode will cancel.
- Press and hold the STB button for 5 seconds. The STB button will light up
 - Press POWER.
 - Press 1.
 - Press OK.



Programming Your Entone Nova Remote Control

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / DVD / AUX) to choose the device mode.
3. Press and hold the "SETUP" key until the LED light blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

